



Mounting

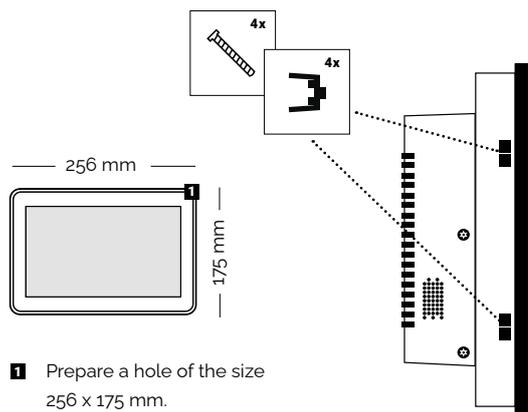


1 Prepare a hole of the size 256 x 175 mm.

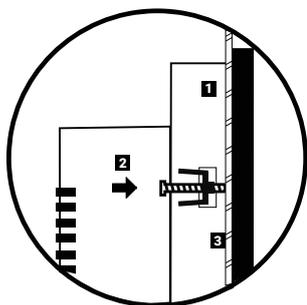

- 2** Secure the panel with screws and struts.
- 3** The panel can be mounted to a sheet of thickness max. 2.5 mm.

1

Installation guide

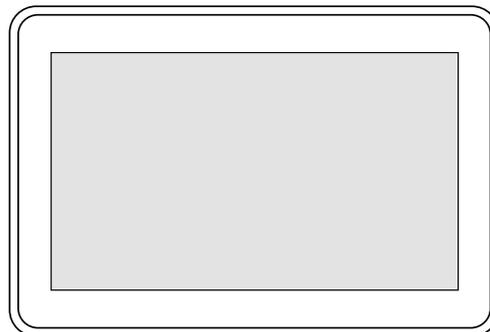


Touch-101-A

HW Revision 2


Connection



1 Connect the supply voltage to the panel using the supplied DC connector.

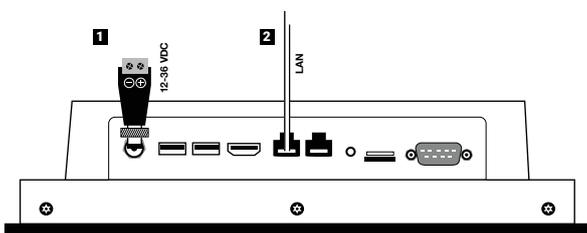

2 Connect the Ethernet cable to the ETH 1 port.

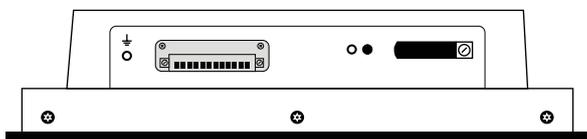

SAFECONTROL s. r. o.
 Vanickova 315/7
 169 00 Prague 6
 IN: 02084287
 TIN/VAT: CZ02084287



support@safecontrol.cz
 www.safecontrol.cz

Information for users on the disposal of electrical and electronic equipment (corporate and enterprise use)

Request detailed information from your dealer or supplier for proper electrical and electronic equipment disposal.


Information for users on the disposal of electrical and electronic equipment in countries outside the European Union

The symbol below is valid only in the European Union. Request detailed information from your local authorities or equipment retailer for proper electrical and electronic equipment disposal.




Made in Czech Republic
 Document version 2025-05-16

Home page settings

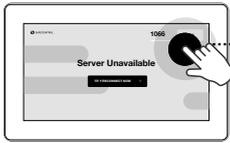

Touch the panel in **the upper right corner on Service PIN** and enter the PIN code **"1066"**.

Confirm by clicking **Enter**, and a **Configuration** menu will appear.

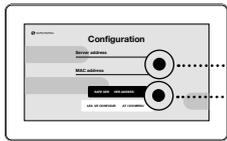

The device has preset the destination IP address **http://192.168.10.250/display**.

The panel is ready for the connection with the Webserver SAFECONTROL. Therefore, it is in preset address **/display** for registration to automatical login.


Change the IP address in the requested format if needed. Choose http or https according to your server.

Save the settings by clicking the button **Save server address** and leave the menu by clicking the **Leave configuration menu** button. Click **Reconnect** to verify the server's availability. Check the network connection and hardware settings if the server is still unavailable.

Entrance to the service menu



Touch the touchscreen **5 times very quickly** to enter **the service menu**. A window for entering the PIN code will appear. The PIN code is **"1066"**.

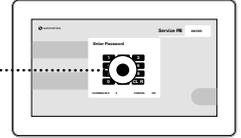

Now you entered **the service menu** of the panel and kiosk application. It is recommended to consult technical support before changing any default settings. Undesirable changes might cause malfunction of the touch panel.

Touch **the gear symbol** in the upper right corner to configure the network interface.

Hardware settings



The most important configuration in the hardware settings is the network interface. The Ethernet port is preset to the DHCP client. If no DHCP server is available in the network, it is essential to set a Static IP address, gateway, etc.

The panel can also be connected through Wi-Fi. In this case, go to the **Wi-Fi & Network** settings, allow Wi-Fi, set SSID, and enter the password.

The recommended connection is through Ethernet. Read on to find out how to set a Static IP address.

Additional hardware parameters can be set in other parts of the menu (e.g. time or time zone).




For further settings and troubleshooting, contact technical support at: support@safecontrol.cz

If you are interested, you can sign up for training or watch tutorial videos on the YouTube channel SAFECONTROL.

IP address settings



Go to the **Wi-Fi & Network** tab and click **Ethernet** settings.

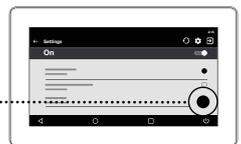

Switch the default DHCP Client to **Static IP**.

A configuration window will appear. Fill in all the parameters correctly – IP address, mask, gateway, DNS server – and by clicking **Connect**, save the settings. Use the arrows to navigate back to **the Service menu**. Click **the leaving symbol** in the upper right corner of the screen to exit.



Confirm the panel's automatic booting to the SAFECONTROL kiosk application.